mpman

Mp4 Player

Instruction Manual

Please read this instruction carefully before the operation

FOR MODEL NO

MP103WOM

EN

User manual

Key Definitions

1. NEXT: Next Music/Fast-Forward
2. LAST: Previous Music/Rewind
3. Volume increase
4. Volume decrease
5. Menu: Menu button
6. Play: Play/Pause button
7. Micro SD card
8. USB jack
9. Power ON/OFF
10. Earphone jack

1. Play music

a) Simple actions

1. Enter Music Mode and press **Play** to play music.
2. Select a Track: **Last**: Previous Track;
   Next: Next Track.

b) Equalizer Mode

1) When playing music
2) Press MODE to enter in submenu
3) Push **Next** choosing Equalizer Mode;
4) Press **Mode** to entry ‘Equalizer Mode’ submenu.

Select an equalizer:
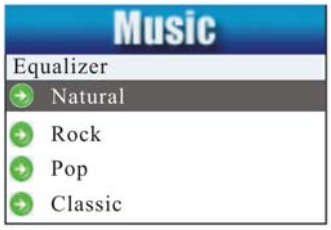
5) Detail of each equalizer (EQ):
Natural, Rock, Pop, Classic, Soft, Jazz, DBB

6) Push **Next** to select an EQ and press **Mode** to confirm.

c) Synchronous Lyric Display

The player supports lyric files with *.LRC suffix, and displays synchronously.

How to use lyric files?

Please make sure the lyric has the same name as the music file. Press MODE and hold for a few seconds.

For example:

Music file: Journey.mp3

Lyric file: Journey.lrc

2. Play Videos

1. Enter main menu, press **Next** scrolling to “MOVIE” (Only available to AMV files):
2. Press **MODE** to enter:
3. Press **PLAY** to start video.

1). When in the interface of ‘Movies stop’

2). Press **MODE** to enter submenu.

Local Folder, Delete file, Delete all, Repeat (Normal, repeat one, Folder, Repeat Folder, Repeat all, Random ,intro) , Exit.

3. Record

a) Recording in “Record mode”

1. Enter the main menu:
2. Push **Next** scroll to Record mode
3. Push **Mode** to select Record mod, screen will display as below:

4. Press **Play** to start / pause recording.
5. Press Mode for a few seconds to save the recording.

b) Select Record Type

1. Press **Mode** to enter record submenu

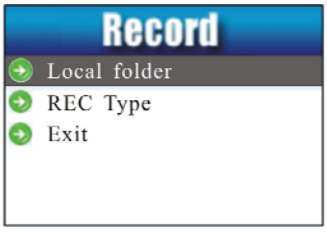

2. Push next scrolling into ‘Record type’ submenu then presses Mode to select it.

4. Press **Next** to choose appropriate type and press **Mode** to select it
5. Press **Play** to start recording.

4. Voice

a) Enter main menu
b) Push **Next** to choose ‘Play mode’
c) Push **Mode** to enter playing interface
d) Press **Play** again to play the file.
e) Choose voice record files:
Last: Select previous file;
Next: Select the next file;

f) When in the interface of ‘Voice stop’
g) Press **MODE** to enter submenu.
Local Folder , Delete file ,Delete all , Exit.
h) When in the interface of ‘Voice play’
I) Press **MODE** to enter submenu.
Repeat, Replay mode , Exit.

5. Using FM radio

a) Enter main menu;
b) Push **Next** scrolling “FM Mode”
c) Push **Mode** to enter

d) Auto search “20 pressets maximum”

Hold **Last/Next** 2 seconds to start the channel search in 100 KHz interval upwards or downwards. To stop tuning,push **Last/Next.**

e) Manual tuning

Push **Last**: Downward 100 KHz

Push **Next**: Upward 100 KHz

f) Save current channel:

Push Mode to enter FM submenu

Press **Mode** again to save channel.

g) Listening to a saved channel:

You can press **Play** to choose a saved channel.

h) Record.

1. Press **PLAY** to start recording.
2. Press Mode for a few seconds to save the record**.**
3. When in the interface of ‘Record stop’
4. Press **MODE** to enter record submenu

6. Photo Browsing

This function is only available for JPEG and BMP format.

a) In the main menu, press **Last/Next** choosing Browsing pictures.

b) Press **Mode** to enter corresponding submenu.

c) Press **Last** or **Next** choosing the document you want to read, then press **Play** to play it.

d) In stop mode we have a submenu.

Local folder, Playback set (Manual play, autoplay) , delete file ,delete all, exit.

7. Setup

a) Enter Settings

You can set system performances here, options may vary in different versions of the firmware.

1. Entry main menu
2. Push **Next** Scrolling into “Settings”
3. Press **Mode** to entry.

b) Options introduction:

(System time)	Setting system date and time
(LCD set)	Screensaver setting
(Language)	Choosing different languages
(Power off)	Setting a count down time in minutes, the player will shut off when time out.
(Memory info)	Check memory space and usage status
(Firmware Ver.)	Version of player's firmware
(Firmware upgrade)	Use for upgrade firmware
(Exit)	Exit from Setting interface

8. E-book

a) On main menu, press **Next/Last** choosing e-Document,

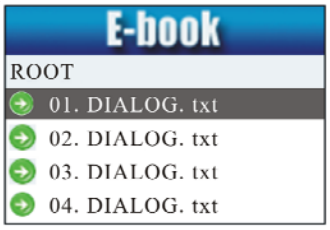

b) Press **Mode** to enter corresponding submenu:

c) Press **Next** or **Last** choosing the document you want to read,
then press **Play** to read it.

Note: If you are in 'Manual play' you must scroll text via **LAST** or **NEXT**; texts can be scrolled automatically under 'Auto play' set.

a) We have two menus.
In stop mode: Local folder , playback set ,Deleted file ,delete all , exit.
In play mode: Bookmark select ,bookmark delete ,bookmark add , exit.

9. Game

Enter main menu

10. Using USB Disk

The player is also a standard USB disk. Supported by Windows / Mac/XP.

The player supports USB power supply, can be used without using the battery when connected to a PC. To enter, when in' waiting mode' press **Mode** return to main menu and choose the operation you need.

When connected to PC, The player works on the three modes below:

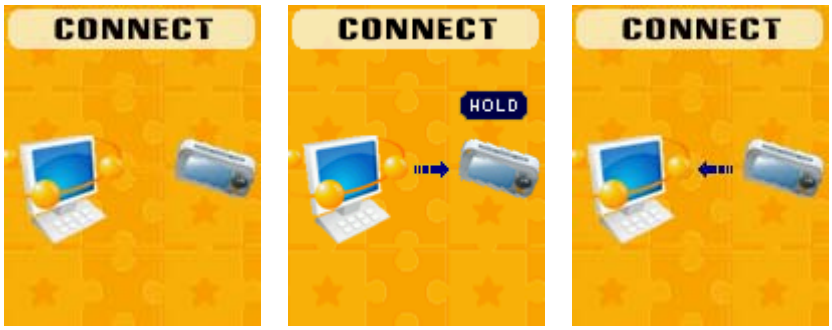

1. Waiting 2. Downloading 3. Uploading

11. Other Settings

a) Play mode (Play submenu)

You can choose different play mode (repeat, shuffle) when playing music or recorded files.

The first option on Play submenu is 'Play mode'

○ **REPEAT:** Normal, Repeat One, Folder, Repeat Folder, Repeat All, Random, Intro.

b) Replay mode (Play submenu)

Enter from Play submenu:

○ **A-B Repeat**

1. When play music or recorder
2. Push **Mode** to entry play submenu
3. Push **Next** scrolling into 'Repeat Mode' option
4. Push **Mode** to enter

   Repeat Mode: 'A' of Symbol flashes, waiting for starter A
5. Push **Next** to select 'A'

   'B' of symbol flashes, waiting ender B
6. Push Next to select B. Symbol fixed and starting repeat between A-B, while playing, you can push **Last** to reset A point.

c) Replay times (Play submenu)

Please consult into 'Replay mode'

Replay time determines the times of play A-B repeat until exit

12. Battery Level

The power displays full. With the increase in the use of time, the battery indicator will be reduced.

When the battery is almost /completely run out. The battery icon will be complety white and the unit should be charged to through of the mini USB.

Without the use of the player, please try to turn off the power.

13. Troubleshooting

No Power	Make sure you have switched the player on
No Sound	Make sure the volume is not at 0 and that the earphones are connected correctly. Please make sure the earphone jack is clean Damaged MP3 files may have background noise and may not even play.
Strange characters on display	Make sure you have chosen the correct language
FM has bad performance	Adjust place of player and earphone Switch off nearby power appliances. Earphone is used as antenna
Cannot Download Music	Check USB cable, and make sure the player is properly connected to the PC Check if the driver has been well installed Make sure there is sufficient memory

MPMANAGER

For movie and music synchronisation and conversion, please use MPMANAGER software supplied in the

CD ROM.

This software can be used also for UPDATE of your player.

MPMANAGER manual is included in your CDROM.

Technical Specifications

Dimension	80mm x 40mm x 9.8mm	
Weight	23.6g	
Screen	1.8 TFT (128*160)	
Connecting to PC	High Speed USB2.0	
Memory	Nor Flash	
Voice Recorder	Format	WAV (32K , 64K,128K ,256Kbps)
Music Formats	MP3, WMA	
MP3, WMA	Max. Output	(L) 10mW + (R)10mW (32Ohm)
	MP3 Bit rate	8K bps – 320K bps
	WMA	5K bps – 384K bps
FM radio	Receiver frequency range	76MHz – 90MHz / 87MHz – 108MHz
	Storage units	20 + 20
	Maximum headphone output	(L) 10mW + (R)10mW (32Ohm)
	Signal to noise ratio	45dB
Photo	Format	JPEG, BMP
Operate Temperature	5 to 40 degree	
Multi-Languages Display	English, French, Germany, Italian, Dutch, Portuguese, Spanish	
Supported Systems	Windows / XP/Mac, etc.	

Please note: Design and characters may change without prior notice.

For more information please check our website

www.mpmaneurope.com

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur